



NOTE:
 Only load jumper when Aux cards is used
 to send SVT output and Hold pin is defined INPUT on PULSAR.

UNIVERSITY OF CHICAGO ELECTRONICS DEVELOPMENT GROUP	
Pulsar Front_Panel/DATAOUT	
DATE	REVISION DESCRIPTION
SHEET 19 OF 25	
DATE 01 Feb 1999	
DRN T. Nakaya	C-2501 REV A