


PMT PreAmp
SCHEMATIC DRAWING: 2850
SPECIFICATION DRAWING: 2851
ASSEMBLY DRAWING: 2852
June 22, 2015

Mircea Bogdan
The University of Chicago


COMPONENT SIDE: FILM1

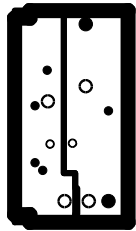

PMT PreAmp
SCHEMATIC DRAWING: 2850
SPECIFICATION DRAWING: 2851
ASSEMBLY DRAWING: 2852
June 22, 2015

Mircea Bogdan
The University of Chicago


POWER: FILM2

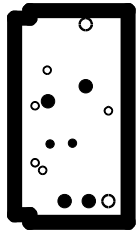

PMT PreAmp
SCHEMATIC DRAWING: 2850
SPECIFICATION DRAWING: 2851
ASSEMBLY DRAWING: 2852
June 22, 2015

Mircea Bogdan
The University of Chicago


GROUND: FILM3



PMT PreAmp
SCHEMATIC DRAWING: 2850
SPECIFICATION DRAWING: 2851
ASSEMBLY DRAWING: 2852
June 22, 2015

Mircea Bogdan
The University of Chicago


Bottom FILM4

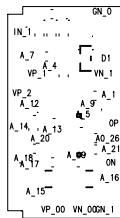

PMT PreAmp
SCHEMATIC DRAWING: 2850
SPECIFICATION DRAWING: 2851
ASSEMBLY DRAWING: 2852
June 22, 2015

Mircea Bogdan
The University of Chicago


Silkscreen Top: Film_5



PMT PreAmp
SCHEMATIC DRAWING: 2850
SPECIFICATION DRAWING: 2851
ASSEMBLY DRAWING: 2852
June 22, 2015

Mircea Bogdan
The University of Chicago


Silkscreen Bot: Film_6

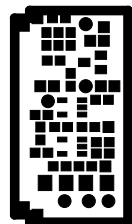

PMT PreAmp
SCHEMATIC DRAWING: 2850
SPECIFICATION DRAWING: 2851
ASSEMBLY DRAWING: 2852
June 22, 2015

Mircea Bogdan
The University of Chicago


Solder Mask Top: Film_7

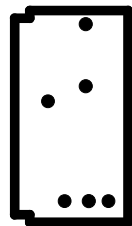

PMT PreAmp
SCHEMATIC DRAWING: 2850
SPECIFICATION DRAWING: 2851
ASSEMBLY DRAWING: 2852
June 22, 2015

Mircea Bogdan
The University of Chicago

Solder Mask Bottom: Film_8



PMT PreAmp
SCHEMATIC DRAWING: 2850
SPECIFICATION DRAWING: 2851
ASSEMBLY DRAWING: 2852
June 22, 2015

Mircea Bogdan
The University of Chicago

Paste Mask Top: Film_9